

SET UP INSTRUCTIONS

3717 - 63" THREE-TIER CORTONA FOUNTAIN ON 5' FIBERGLASS POOL

3719 - 63" THREE TIER HARVEST FOUNTAIN ON 5' FIBERGLASS POOL

Open bag containing the pump kit **P46009**. In the kit you will find:

1 - 40460 (460 gallon per hour pump)	1 - 3/4" X 1/2" plastic tee	1 - rubber stopper
1 - 72" long piece of 3/4" clear tubing	1 - 1/2" plastic tee	1 - tube of silicone
1 - 6" long piece of 1/2" kink free tubing	1 - putty tape 6" long	

1. Find the 5' fiberglass pool. In the center of the pool there is a threaded insert. Screw the reducing male adapter into the threaded insert. Find the pump and the rubber stopper. Slip the rubber stopper onto the power cord about 15" from the pump. Place the pump in the center of the pool and run the plug end of the power cord down through the PVC pipe in the center of the pool. Retrieve the power cord from bottom side of pool and place in the groove in the bottom of pool. Insert the rubber stopper snugly into the PVC pipe in the center of the pool.

Place the pool on a firm and level surface where fountain will remain and level. To level pool, place level on the top rim of pool. Level in all directions. Shim as needed.

2. Find the square pump house and carefully position it in the center of the pool. The square opening in the pump house should face toward back of fountain. Find the pedestal and carefully position it on the pump house. Find the larger shell and position it on top of the pedestal. To level shell, place level on the top of the outside rim of the shell. Level in all directions. Shim as needed.

3. Find the piece of 3/4" clear tubing 72" long. Run one end of the 3/4" clear tubing down the hole that is in the center of the shell and down through the center of the pedestal into the pump house. Connect the 3/4" clear tubing to the outlet of the pump. Position the pump in the center of pool with the dial type flow control facing the square opening. Check to make sure that the pump is seated on the floor of the pool.

Cut the 3/4" clear tubing 1" below the top surface of the center housing in the large shell.

4. Find the 3/4" X 1/2" plastic tee, the 1/2" plastic ell and the 1/2" kink free tubing. Attach one end of the 1/2" kink free tubing onto the middle connection of the 3/4" X 1/2" plastic tee. Attach the 1/2" plastic ell onto the opposite end of the 1/2" kink free tubing. Attach an end connection of the 3/4" X 1/2" plastic tee onto the end of the 3/4" clear tubing located in the center of the large shell. Attach the remainder of the 3/4" clear tubing onto the opposite end connection of the 3/4" X 1/2" plastic tee.

5. Place the 1/2" plastic ell that is attached to the 1/2" kink free tubing inside the center housing located in the large shell. Find the second shell and run the 3/4" clear tubing up thru the hole in the center housing of the shell. Position shell on top of the larger shell and level. Level as stated in step #2.

6. Cut the 3/4" clear tubing 7" above the top surface of the center housing on the second shell. Find the finial. Insert the 3/4" clear tubing into the PVC pipe in the bottom of the finial and slide the finial down onto the center housing of the second shell. Position the finial on the fountain.

Find the putty tape, remove the backing and fold in half long ways. Apply the putty tape around the 3/4" clear tubing and down into the PVC pipe in the top cavity of the finial. Keep the 3/4" clear tubing in the center of the PVC pipe while you apply the putty tape all the way around. **You want to create watertight seal so use all of the putty tape.**

Find the square plug and install into the opening in the pedestal.

7. Find the drain plugs and insert snugly into the drain inserts located in the pool and the larger shell of the fountain. Remove any tape and or dirt from the drain insert before you insert the drain plug.

8. Find the four pool wall sections. There are two sections with flanges and two sections without flanges. Start with a wall section with flanges, then a wall section without flanges, then a wall section with flanges, then a wall section without flanges. As you position each wall section around the fiberglass pool, line up the inside radius of the wall section with the inside radius of the fiberglass pool.

9. Fill the pool and shells with tap water and plug pump into a 110VAC GFCI protected outlet. Adjust the water flow to the finial using the dial type flow control located on the front of the pump until the desired result is achieved.