



MASSARELLI'S®

MAKERS OF FINE STONE GARDEN ACCENTS

SET UP INSTRUCTIONS

3846 61" SAXOPHONE FOUNTAIN

3848 62" GUITAR FOUNTAIN

Open bag containing the pump kit **P13015**. In the kit you will find:

- | | |
|--------------------------------------|---|
| 1 - 40160 (160 gallon per hour pump) | 1 - 4" putty tape |
| 1 - LED light kit (white) | 1 - 20" long piece of 1/2" kink free tubing |
| 1 - 2-hole rubber stopper | 1 - hose clamp |

1. Place the pedestal on a firm and level surface where fountain will remain. To level pedestal, place level on the top of the pedestal. Level in (2) Two directions left to right and front to back. Shim as needed. Place the shell on the ground near the pedestal.
2. Find the pump, the LED light kit and the 2-hole rubber stopper. Slip the 2-hole rubber stopper onto the power cord of the pump and the power cord of the LED light kit. Position the 2-hole rubber stopper about 12" from the body of the pump and about 25" from the LED light.
3. Place the pump and the LED light in the shell and run the plug end of both power cords down the PVC pipe located in the pumphouse. Retrieve both power cords from under shell. Run both power cords down the hole that is through the pedestal. Retrieve both power cords from under pedestal and place in groove in bottom of pedestal. Place the shell on the pedestal. While placing the shell on the pedestal carefully pull the remainder of both power cords until all is hidden inside the fountain. Insert the 2-hole rubber stopper snugly into the hole.
4. Position the shell on pedestal and level. To level shell, place level on the top rim of the pump house in the center of shell. Level in (2) Two directions left to right and front to back. Shim as needed.
5. Find the piece of 1/2" kink free tubing 20" long and hose clamp.
If you purchased the Saxophone Fountain use the length of the 1/2" kink free tubing 20" long.
If you purchased the Guitar Fountain TRIM THE LENGTH of the 1/2" kink free tubing to 15" long.
Attach the piece of 1/2" kink free tubing to the outlet side of the pump with the hose clamp. Insert the LED light head into the opposite end of the 1/2" kink free tubing. Place the pump in the pumphouse with the tubing assembly facing up
6. Find the Saxophone or Guitar finial. In the center of the Saxophone or Guitar finial there is a PVC pipe. Remove any excess concrete or tape from both ends of this PVC pipe. **CAREFULLY** guide the LED light head up through the center hole and place the Saxophone or Guitar finial onto the pumphouse in the center of the shell. Position the Saxophone or Guitar finial on the pumphouse.
7. The LED light head will extend beyond the hole in the Saxophone or Guitar finial. **Carefully** push the LED light head down into the hole in the Saxophone or Guitar finial lining up the housing around the LED lights with the top edge of the hole. If necessary, trim the length of the 1/2" kink free tubing.

8. THIS STEP IS FOR THE SAXOPHONE FOUNTAIN ONLY.

Find the putty tape and remove the backing. Fold the putty tape in half long ways. Apply the putty tape around the LED light head. **Carefully** push the LED light head down into the hole in the Saxophone finial. The putty tape is used to seal the hole around the LED light head in the Saxophone finial.

9. Find the drain plug and insert snugly into the drain insert located in the shell of the fountain. Remove any tape and or dirt from the drain insert before you insert the drain plug.



MASSARELLI'S®

MAKERS OF FINE STONE GARDEN ACCENTS

10. Connect the power cord on the LED light to the transformer. Fill the shell with water and plug both the pump and the LED light transformer into a 110VAC GFCI protected outlet. Adjust the water flow to the finial using the built in flow control dial on the front of the pump.